


# TROD'ANGINE®+

Simplified procedure\*

Pour in the entire amount

①

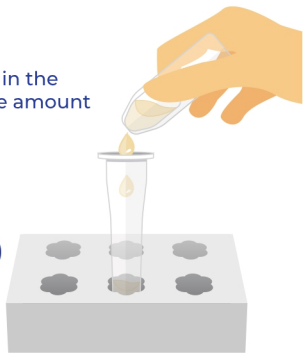

②




③




Wait 1 minute

④

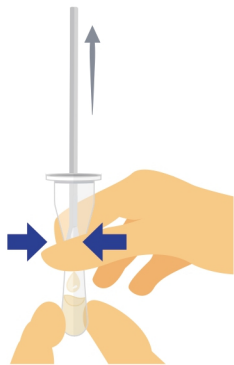

Squeeze the swab

⑤

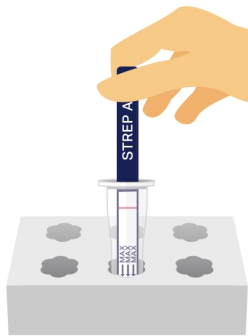

Wait 5 minutes

**Positive result**



**Negative result**



\*Read the instructions for use in full before carrying out the first TROD